



# OPERATION TANNING BED



Read the instructions carefully before you use the tanning bed!



## (A) Start:

By depressing on [ **Start** ] once, the [ **+** ] and [ **-** ] buttons can be used to set the tanning time. Pressing [ **Start** ] for the second time will start the unit.

## (B) Stop:

Pressing [ **Stop** ] once will cause the unit to "Pause". The light will go out but the ventilation will continue to run.

Pressing [ **Stop** ] twice will initiate a mandatory after-cooling phase of 3 minutes. The unit cannot be started during these 3 minutes.

## (C)

a. Reduce 'Tanning Time'

b. Reduce 'Body Cooler' speed

## (D)

a. Increase 'Tanning Time'

b. Increase 'Body Cooler' speed

## (E) Face:

Switch the 'Face Tanner' ON and OFF

## (F) Fan:

Switch the 'Body Cooler' ON and OFF

The last minute of your tanning session is indicated by a signal.

Within this minute you can increase your tanning session.

PLEASE NOTE! Confirm the new time by pressing the button: [ **Start** ]



### After-Cooling




### Override Error

Switch print and/or display print defect



### Filter glass Defect

Filter glass of the face tanner is broken or glass protection is defective

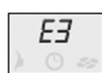

### Communication Error

No communication between switch print and display print



This symbol will appear on the LCD display after 500 tanning hours. It is preferable after 500 tanning hours to replace the lamps with new ones. After replacing the lamps, reset the lamp hour counter.

**Important:** When you receive one of the error messages mentioned above, you should stop using the unit immediately! **Please inform the B&B-owners right away.**